



Soldering two red wires on the AV and GND

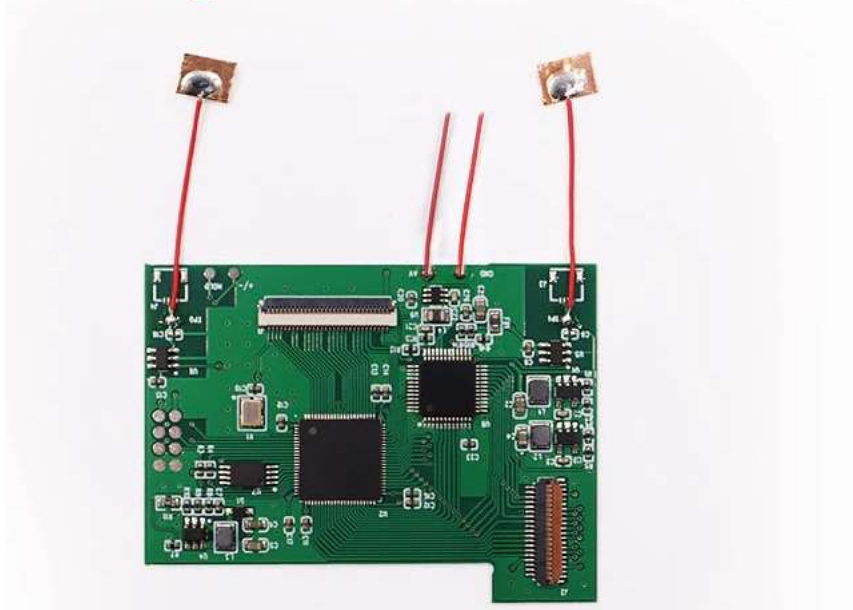

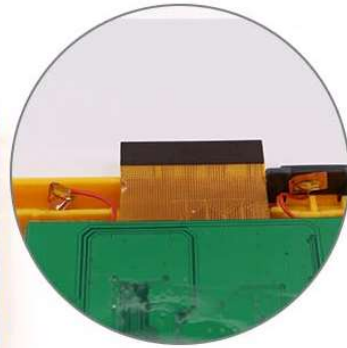



Connect the 'AV' to the 'Pin3'
Connect the 'GND' to the motherboard's GND

