

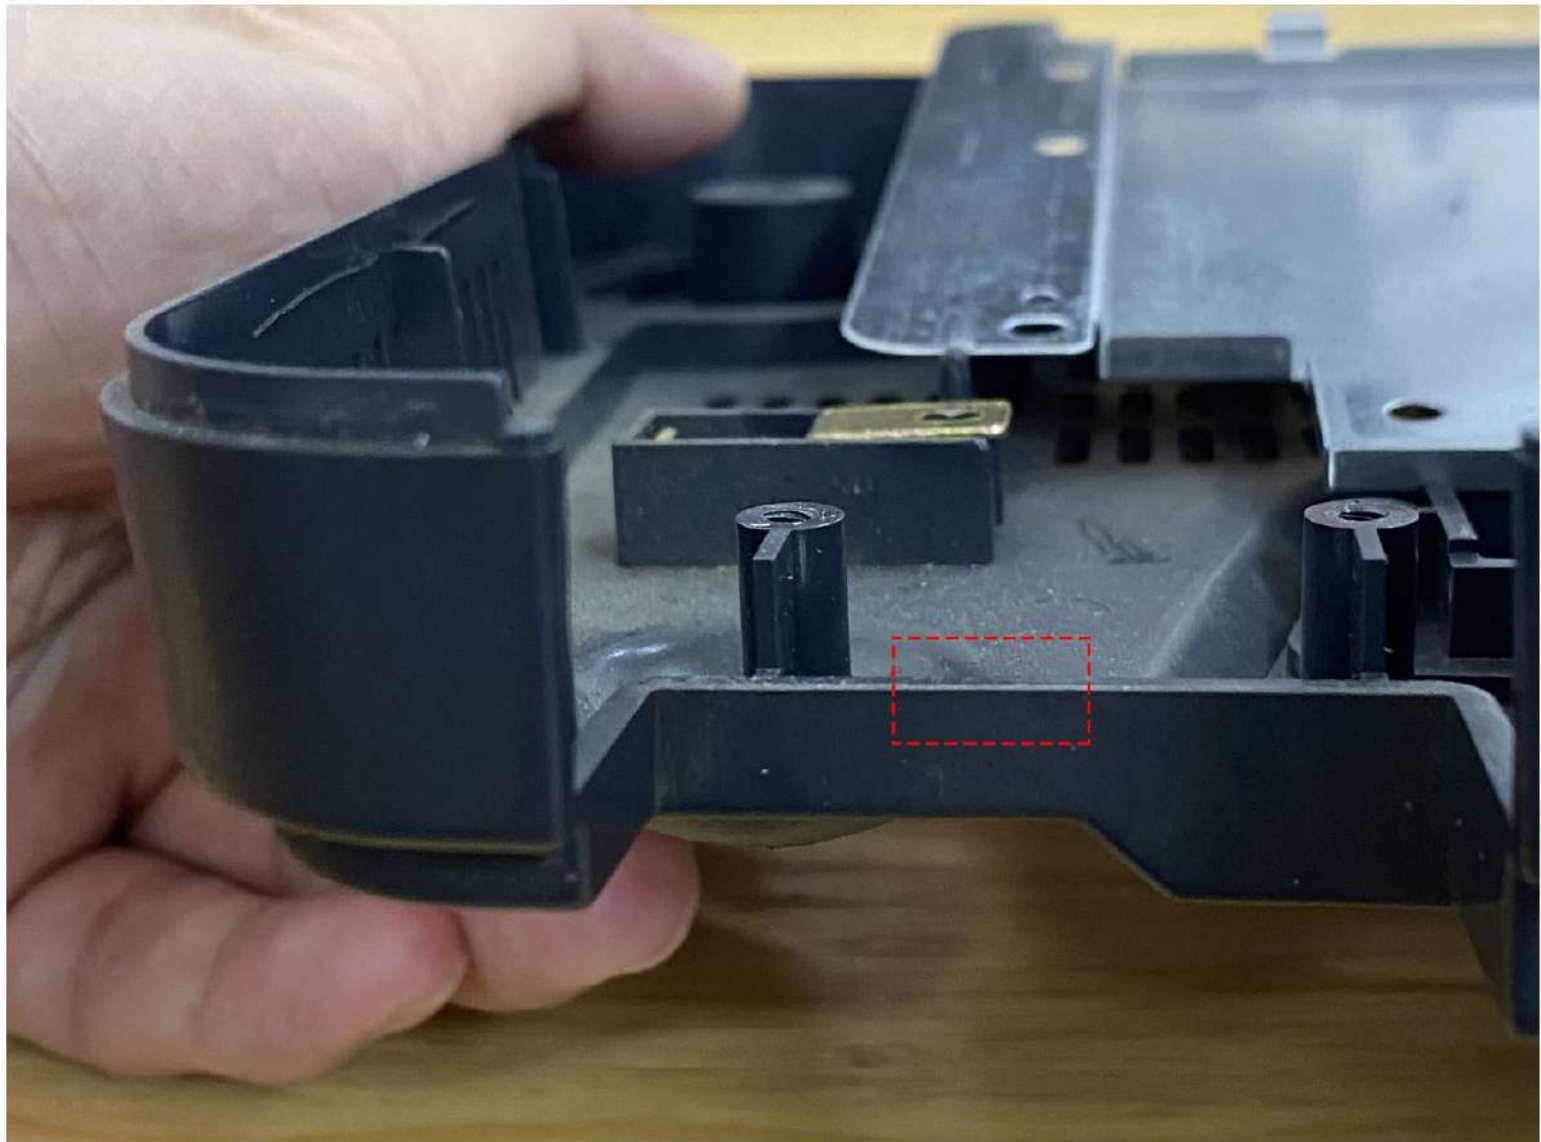
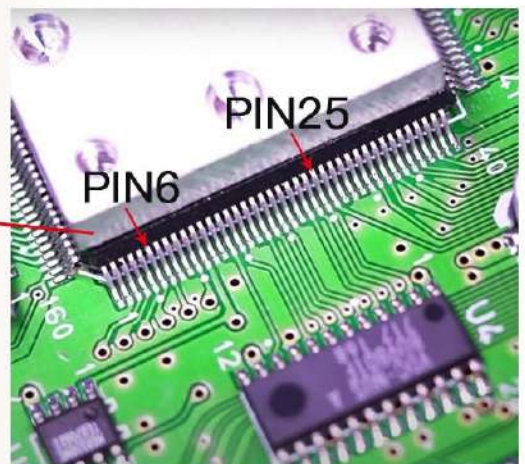




Before cutting the shell

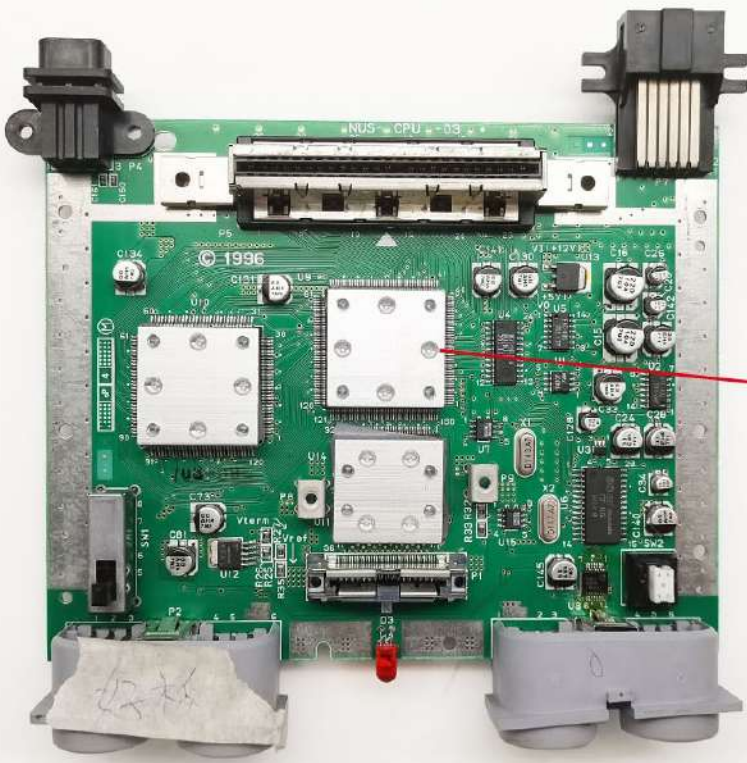


After cutting the shell.

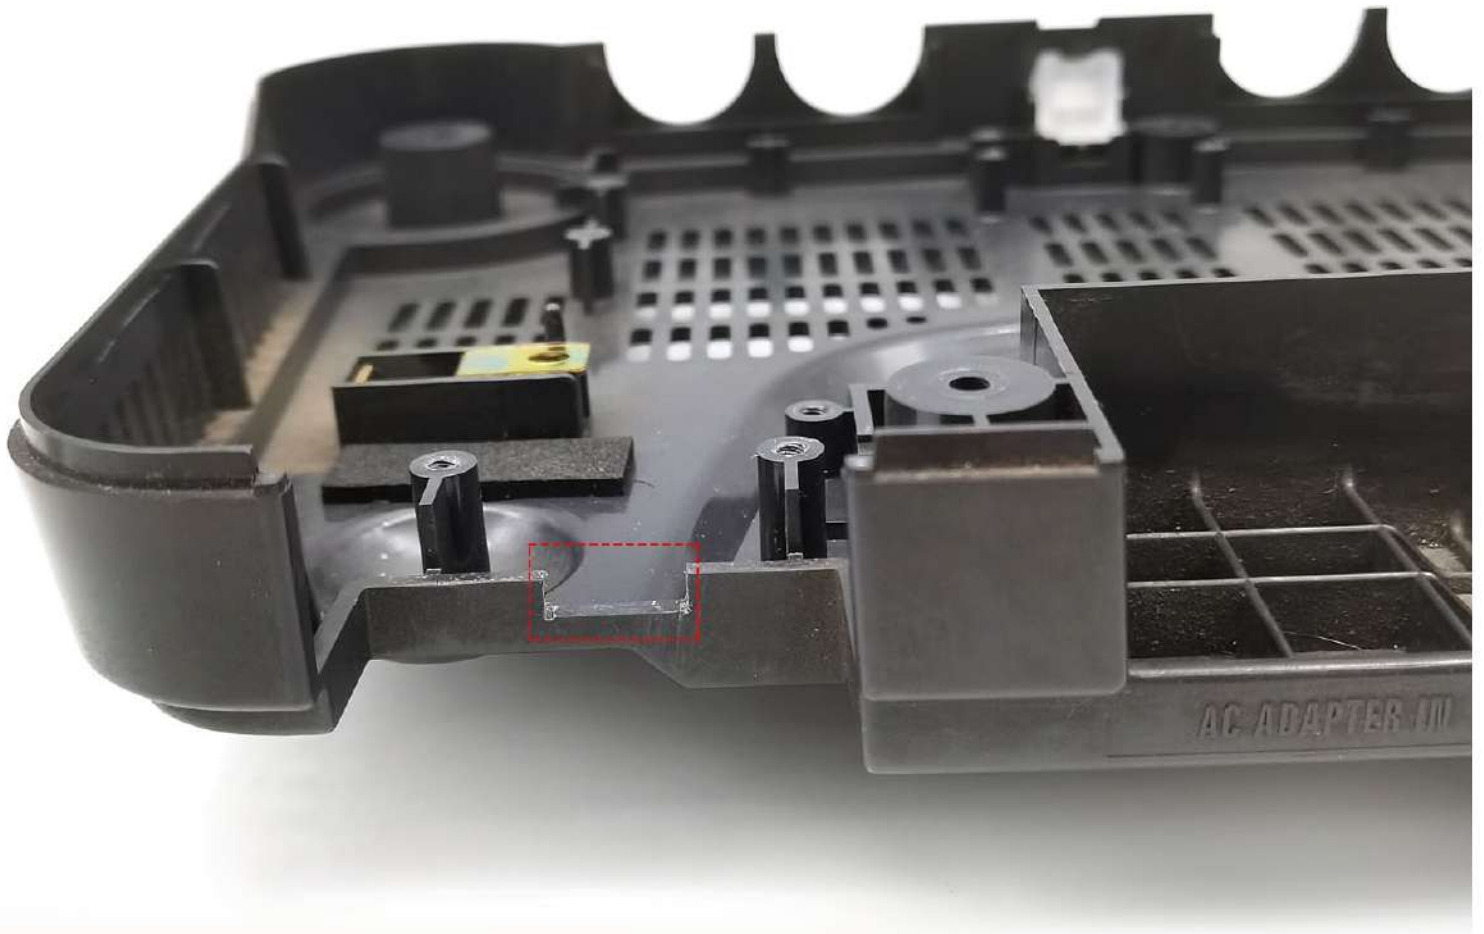


Soldering the flex cable from Pin6 to Pin25.

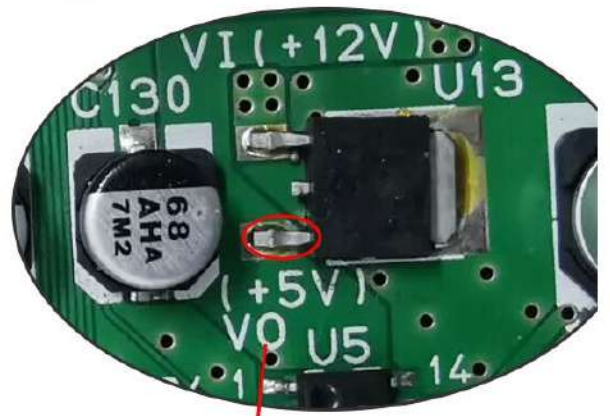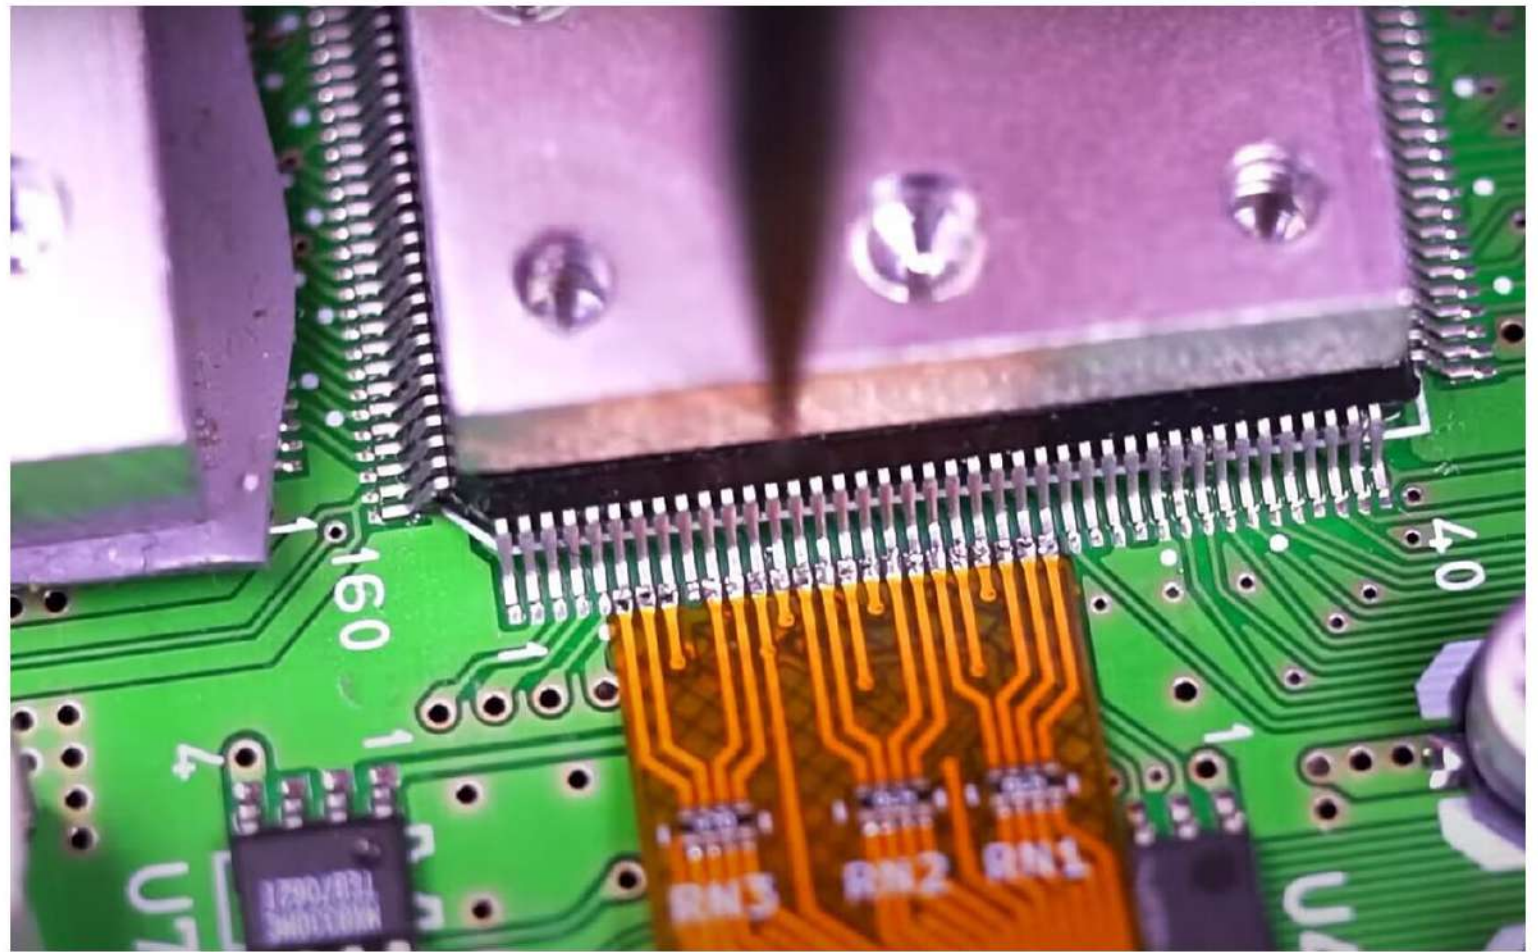


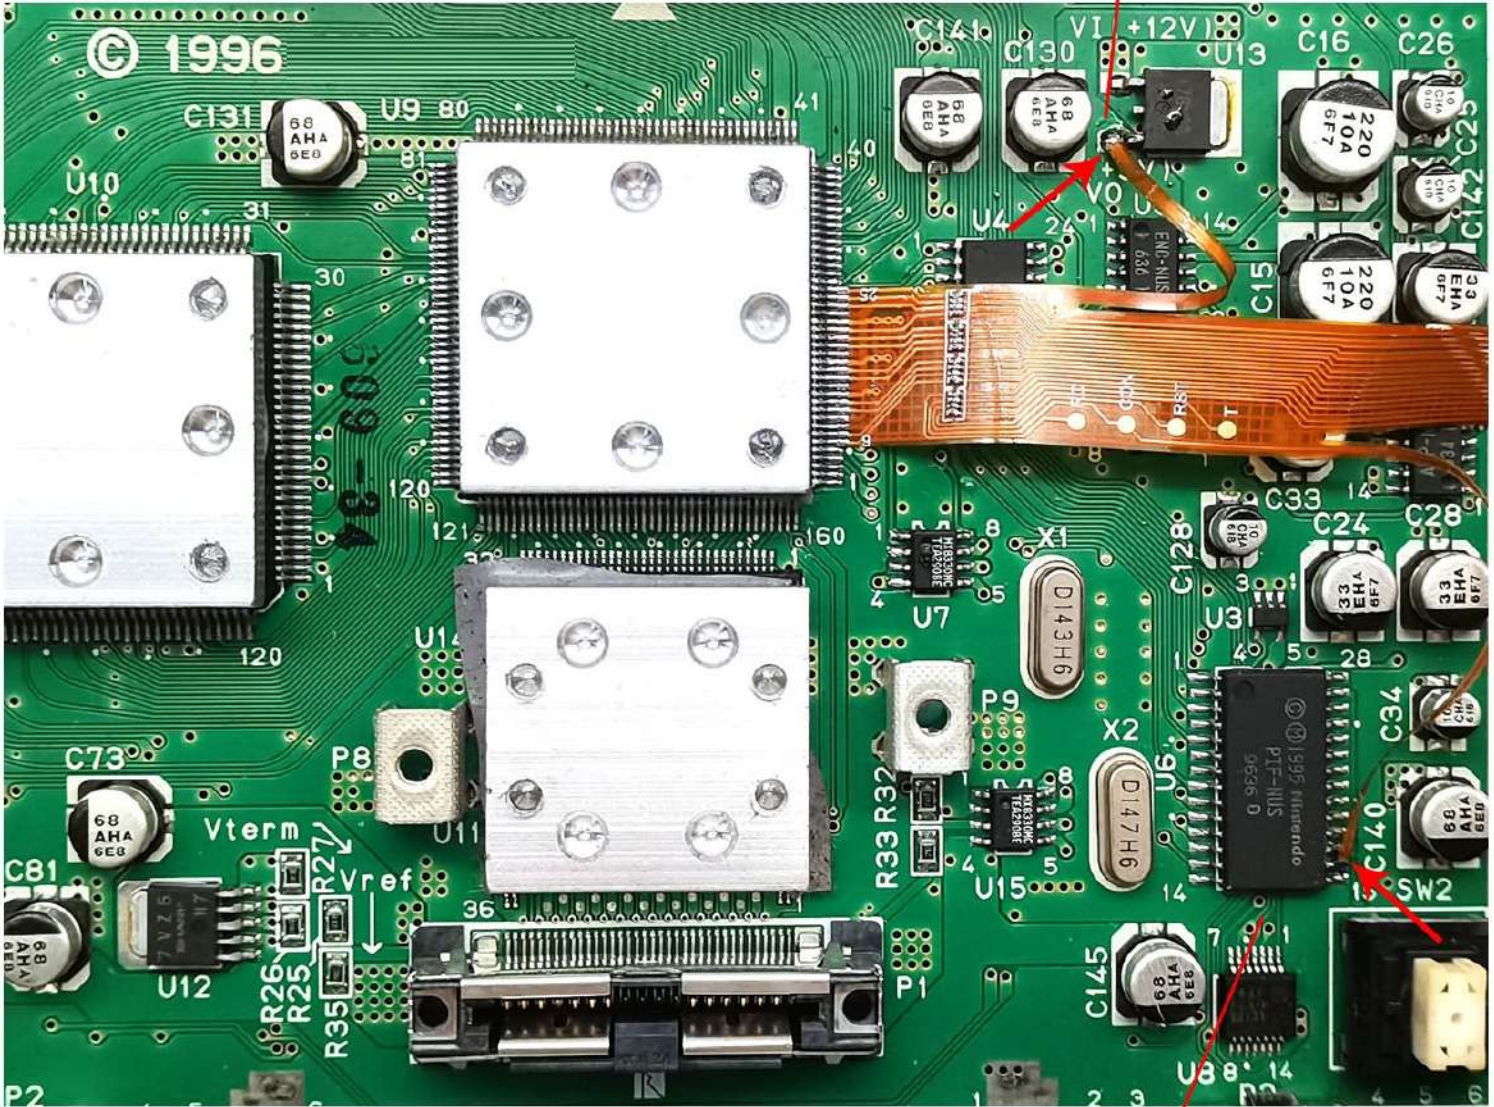

Put the PCB board into the shell, then connect the flex cable.

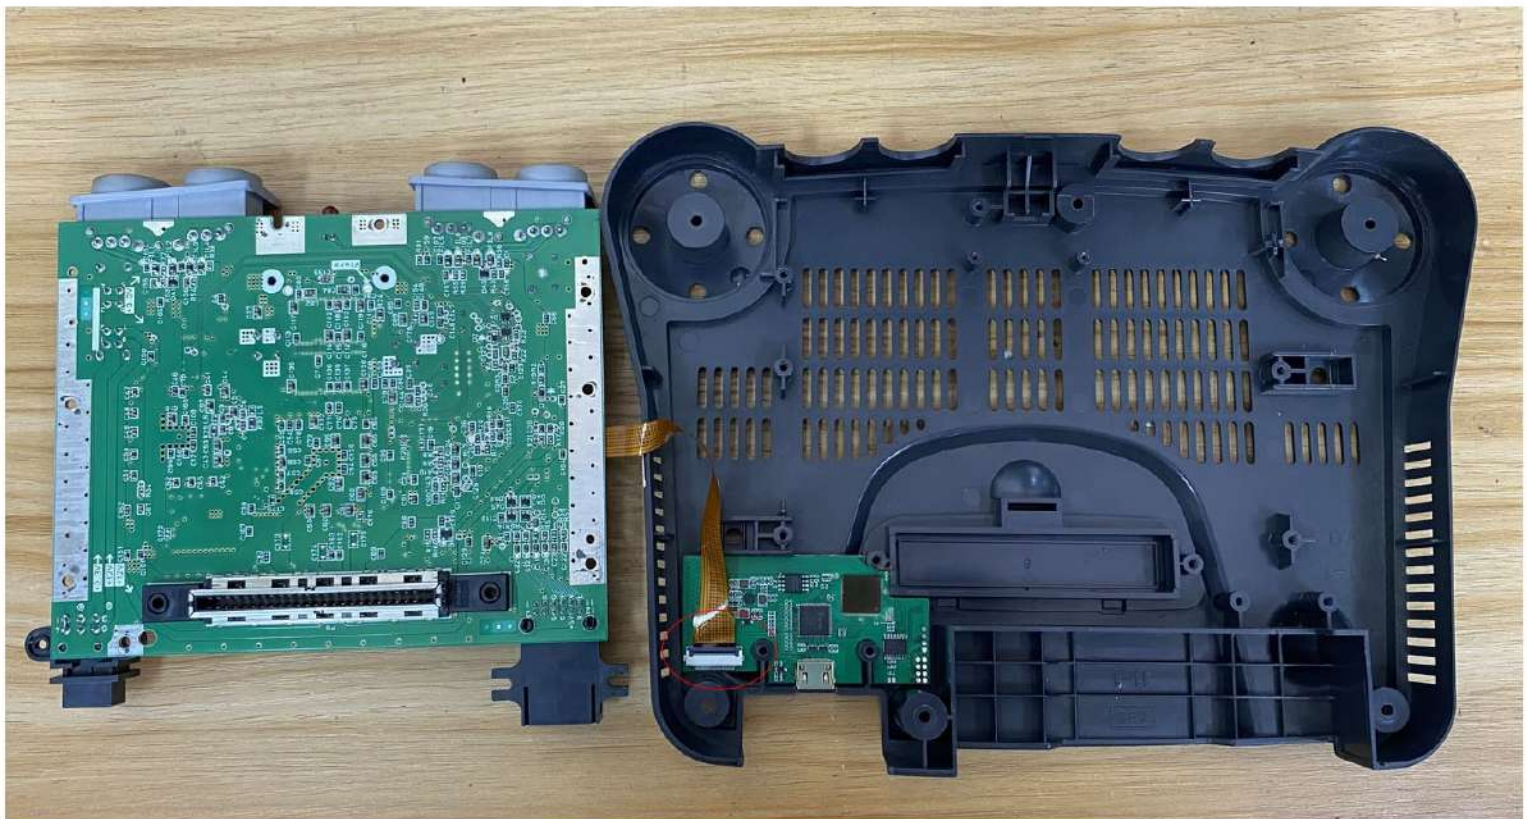

Put the motherboard into the case.

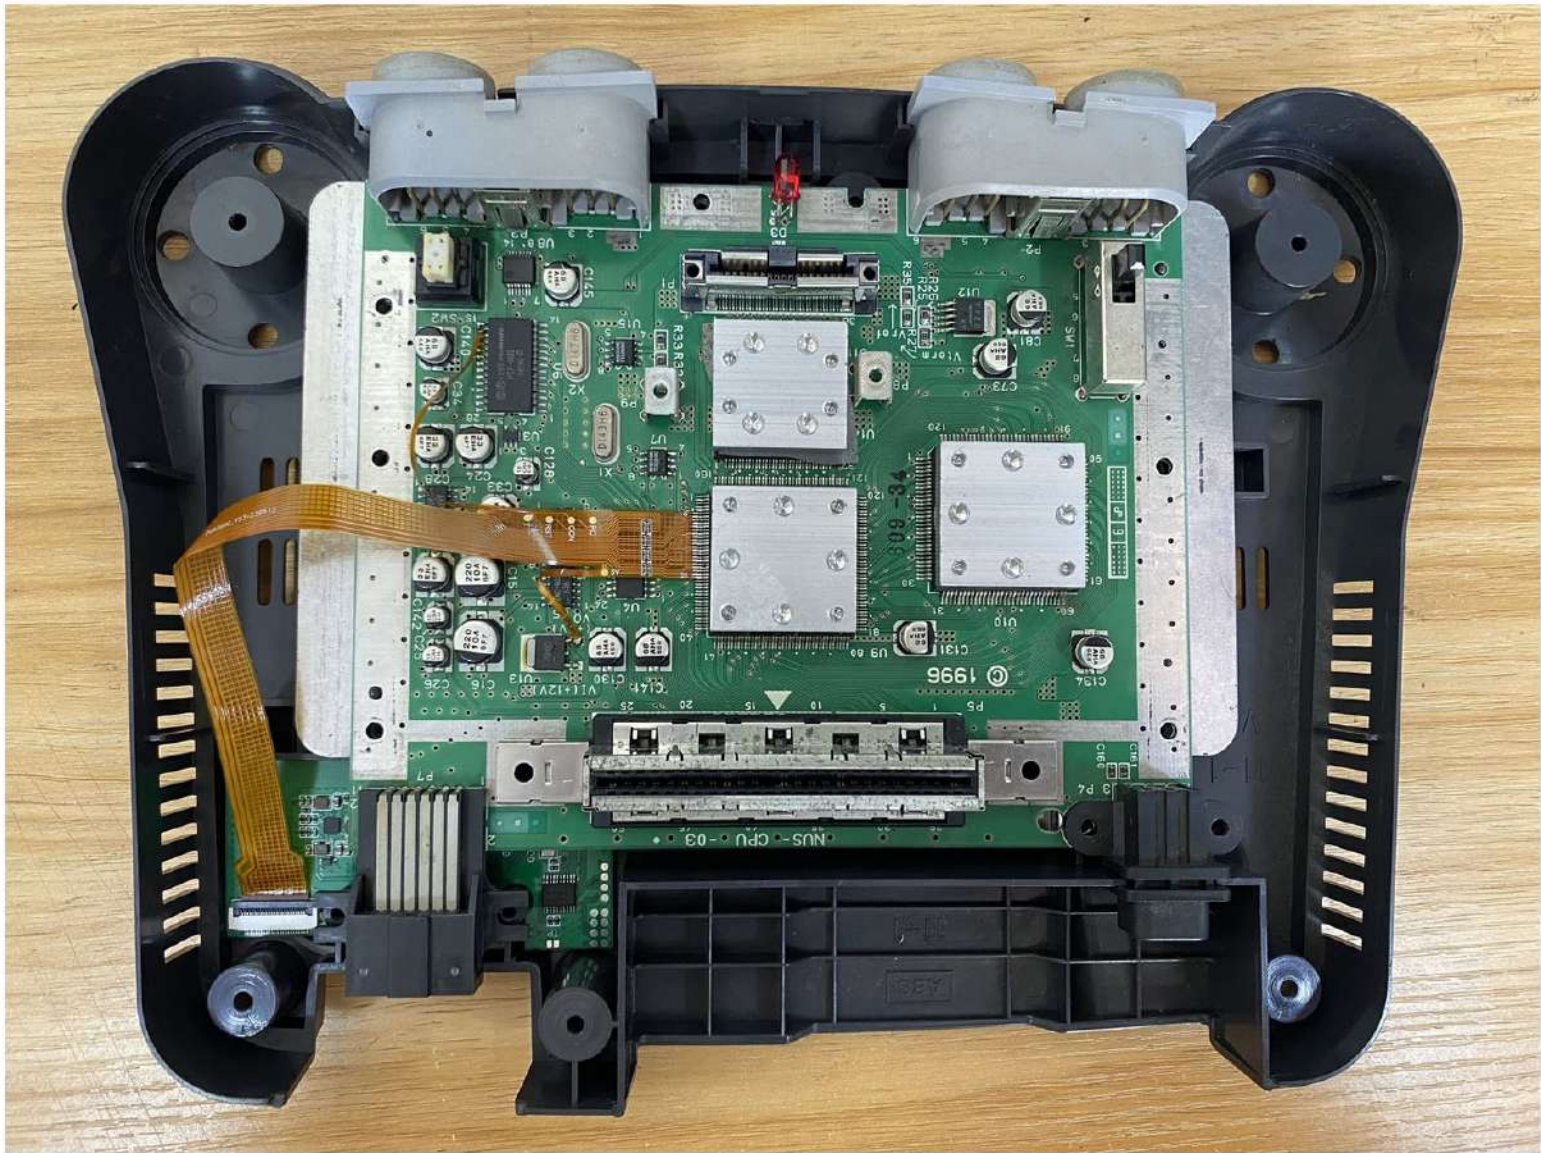

Note: Since some models of N64 shells have bigger screw columns, it may be necessary to trim the screw columns.

